

990DSL CopperPro Copper Loop Qualification Tester

BEST AVAILABLE COPY

16 test sets in one

CopperPro packs all the test, analysis and troubleshooting capabilities an OSP technician needs into one integrated handheld tool for a new view of your local loop:

- Digital Multimeter AC/DC Voltage, Resistance
- Opens Meter measure capacitive length of pair
- RFL Meter locate shorts, crosses or grounds
- 4. Noise Meter VF & WB, Gaussian & Impulse
- 5. Time Domain Reflectometer precisely locate and identify faults
- Dial Set set up or monitor calls
- Leakage Tester "punch" through resistance faults not detected by other tests
- 8. Ammeter test DC loop current
- Loss Meter VF & WB. Measure signal loss over a pair in voice or wideband frequency ranges
- 10. VF & WB Precision Signal Generator — generate precisely controlled signals in single tones, swept sets or composite signals
- Tracing Tone Generator identify pairs
- ANI & CID Tester identify telephone numbers and verify proper Caller ID operation
- ADSL Connectivity Tester verify DSLAM and customer modem functionality
- 14. ADSL and Special Services Pair Qualification Set — prequalify pairs for up to 12 digital services
- VF and WB Longitudinal Balance Meter — identify and prevent noise problems
- 16. Power Harmonics Analyzer quickly track down tough noise problems

The CopperPro family of loop testers from Fluke Networks provides all technicians working in the outside plant a full complement of testing, fault locating and qualification capabilities in a single, rugged, handheld test set. CopperPro is easy to use. Fast. And it offers more capability than any other single loop test set.


Installation and maintenance

CopperPro makes fast work of installing and maintaining service. The one-button POTS AutoTest helps you quickly document status before and after work is complete. And all the basic tests you expect are there, as well – AC and DC voltage, loop current, circuit noise, balance, leakage and Caller ID/ANI. Verify DSLAM and modem on ADSL lines. Make fast work of loss and slope tests with its automated dial-up tests. Even a dial set with phone number storage is built in.

Cable construction and repair

Use CopperPro's unique TDR AutoTest to both locate and identify faults. But that's not all. Find shorted or open pairs fast. Count and locate load coils. Locate higheresistance faults precisely, no matter the cable make up. Step-by-step instructions make set up a breeze.



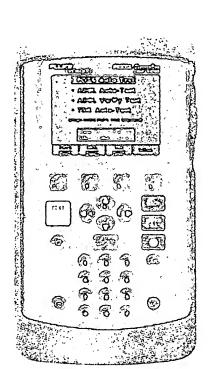


ADSL and special services

Qualifying pairs and analyzing noise problems are no problem for CopperPro. The one-button xDSL AutoTest will give you pass/fail results for all popular services, from ISDN to T1. And the ADSL AutoTest gives you a complete picture of performance capability, including loss, noise and bits-per-tone, and estimated upstream and downstream speed.

The navisandard for all copper loop teating applications—

On the navisandard for all copper loop teating applications—

The next generation in subscriber line test sets

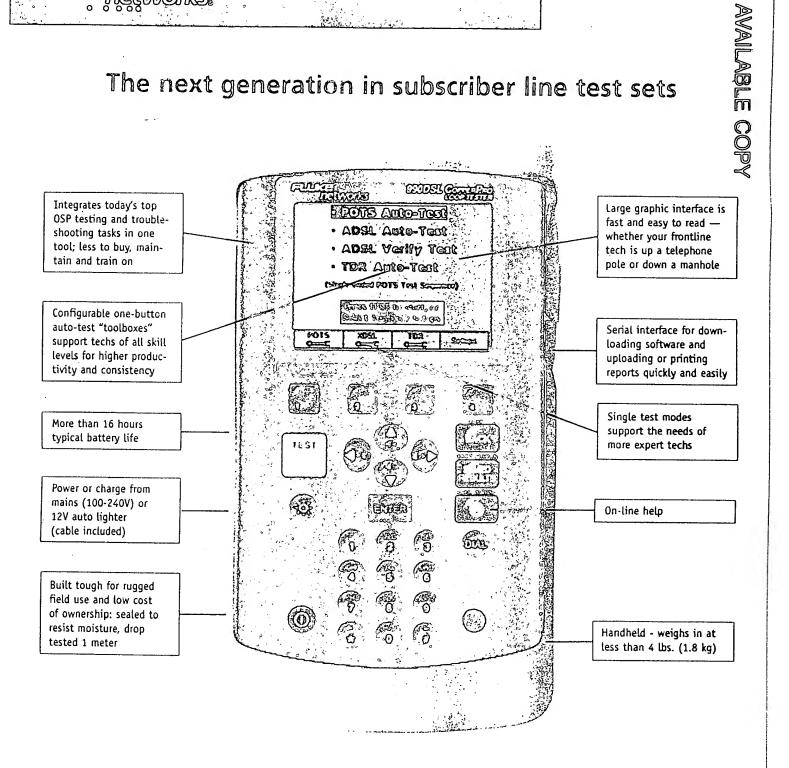

13 Reasons the 990 is the better test set

- · Test Call Waiting Caller ID, as well as standard CID and ANI
- Longer TDR range thanks to 2,500 and 5,000 nS pulse
- Built-in stress test
- Bridge unobtrusively on to active circuits (ADSL and Specials) and see level and noise at all frequencies
- Find intermittent problems with bargraphs, monitor modes and min/max peak recording
- Shoot TDRs in the presence of up to 250V
- Zero in on the source of tough circuit noise problems with the built-in power harmonics analyzer

- · Quickly identify crosstalk source with built-in disturber masks
- Pinpoint noise spikes that knock down specials with wideband impulse noise test
- · Verify longitudinal balance at high frequencies. Identify problems that don't show up at lower frequencies
- Verify DSLAM provisioning and presence of customer modern with ADSL.
- ADSL and xDSL service qualification (with rate prediction for ADSL)
- · Identify the type of fault, as well as distance to it with the unique. one-button TDR AutoTest

CopperPro Testing Capabilities

Standard Features (990DSL and 990DSLWT)

- DCV and ACV measurement
- Shorts, grounds and loop resistance with distance conversion
- Resistive fault location (Wheatstone and K-Test)
- Load coil counter with estimated distance to fault and impedance vs. frequency graph
- Leakage stress test
- Loop device counter
- Tracing tone with four modes
- Voice frequency noise metallic and power influence
- Voice frequency loss
- Voice frequency longitudinal balance
- Voice frequency tone generator
- Automated POTS AutoTest
- Dial set and non-intrusive line monitor
- Voice frequency terminated and dial-up test macros (SmartStrap, MyHelper, FED, SASS, DATU, SmartPro)

Optional Features - Wideband TDR (990DSLWT only)

- Wideband noise and level spectral analysis with interference masks
- Wideband loss
- Wideband longitudinal balance
- Wideband tone generator
- ADSL and XDSL AutoTest for pair qualification
- ADSL verification test for connectivity testing
- Wideband terminated test macros (SmartStrap, MyHelper, FED) TDR AutoTest
- TDR pair 1 test
- TOR compare pair 1 and 2
- TDR difference between pair 1 and 2
- TDR pair 1 monitor
- TDR pair 2 to pair 1 crosstalk
- TDR compare pair 1 to stored trace

Specifications

| (H x W x D): approximately 24.9 cm x 13.5 cm x 6.1 cm (9.6" x 5.3" x 3.2") 1.61 kg (4.0 lb.) 320 x 240 pixel graphic LCD with backlight and adjustable contrast Charging status indicator (located on side connector panel) R5-232 PC/Printer page (DR p) | Specifications: Basi Function AC Voltage DC Voltage | c 990DSL Range 0 to 250V | A. CO |
|---|--|---|--|
| 1.61 kg (4.0 tb.) 320 x 240 pixel graphic LCD with backlight and adjustable contrast Charging status indicator (located as all the status) | AC Voltage DC Voltage | Range | Acqui |
| 1.61 kg (4.0 tb.) 320 x 240 pixel graphic LCD with backlight and adjustable contrast Charging status indicator (located as all the status) | AC Voltage DC Voltage | | Acq |
| 320 x 240 pixel graphic LCD with backlight and adjustable contrast Charging status indicator (located as sixty) | DC Voltage | 0 to 250V | |
| Charging status indicator (located as all | DC Voltage | | Accuracy |
| Charging status indicator (located as all | | 0.4- 40 | 1% ± 0.5V |
| Charging status indicator (located on side co- | (RIN -100 KEZ, 10 MLZ) | 150 to 300V | 1% ± 0.5V |
| | DC Loop Current | | 2% |
| RS-232 PC/Printer port (DB-9) | (430(2) | 0 to 120 mA | 2% ± 0.3 mA |
| 7*** (55 3) | Resistance | 0.00.000 | |
| | (shorts & grounds) | 0 to 100(2 | 0.1% ± 0.10(2 |
| Operates from an analysis | | 100Ω to 4 kΩ | 0.3% ± 0.10Ω |
| Operates from an external AC and 12V vehicle adapter/chargers | Leakage Stress | 4 kΩ to 100 MΩ | 3% |
| | | 2 K1 to 100 M(1 | 200 |
| harran an internal removable NiMH rechargeable | opens | 0 to 3000 ft. (0 to 01/4m) | |
| mustery pack (Installed) | | 3 to 50 kf (914.4 to 15240a | 71 21 |
| A fully charged battery provides approximately 15 ha | • | 50 to 80 kf (15240 to 2439) | n) 3% |
| of normal use | • | 0 to 50 lf (0 to 152(0)) | |
| 2 to 3 hours (in the tester) for a fall, and | | 10 to 13240m) | 10% of Cable Len |
| battery pack | Fault Resistance | 0 to 30 HO | |
| | Loop Resistance | 0 to 30 M() | * |
| | Resistance to Fault | 0 to 4000() | - |
| -20° to 60°C 4 to | (at rf = 100 kg) | 10012 | 0.1% RIS ± 0.100 |
| 406 a 7010 (-4° to 140°F) | K-Test | 10012 to 4 k(1 | 0.3% RTS ± 0.100 |
| - 140°, to 70°C (-40° to 158°F) | (RTS = Res.To Stran) | same as KFF | ± 1% ±161 |
| 95% (Operation without condensation) | Load Coils | | |
| recousey 1902, international nontaction | | • | • • |
| Randoni, 2 g 5-500 us | | 0 to 6 | ± 1 |
| 1 Meter Osan Tore (a. 6.) | 11136 | 0 to 12,000 feet | ±10% ±500 feet |
| 4500 m (45 and 6) | Tracing Ton- | (0 to 3,658 meters) | (152 |
| 1300 m (15,000 ft.) | from and | | (152 meters) |
| | I requency | 577.5 Hz | 0.00 |
| | | >3.5 Vpp | 0.1% |
| | | • , | 10% |
| IEEE 743-1995 | | 6001), 900C) Bridged | |
| ANSI T1.413-1903 | | C. CN. 3k 15k People | 1% |
| | Metallic Noise | 0 to 10 dRm | • |
| | | 10 to 100 dRm | ± 2 dB |
| CS 1 C22 2 W | Power Influence | 40 to 120 dem | ± 1 dB |
| CSA CCC. C NO. 1010.1 | VF Loss | 150 APIU | ± 2 dB |
| th 61326 Emissions and immunity Class As En agent | Signal Level | /0.45 40 15 | |
| + 2nd Ammendment | | -40 to +10 dBm | ± 0.5 dB (dryline) |
| | | ± 1 | 1.0 dB (dial up single tone |
| | Frequency | 100 11 | 2.0 dB (dial up Smart Tone |
| | , | TOO HE to 20 kHz | 0.1% ± 2 Hz |
| | Operates from an internal removable NiMH rechargeable battery pack (installed) A fully charged battery provides approximately 16 hours of normal use 2 to 3 hours (in the tester) for a fully discharged battery pack -20° to 60°C (-4° to 140°F) -40° to 70°C (-40° to 158°F) -95% (operation without condensation) IECC0529 1PO2, international protection water dripping Random, 2 g. 5-500 Hz; 1 Meter Drop Test (3 ft.) 4500 m (15,000 ft.) IEEE 743-1995 ANSI T1.413-1993 CSA C22.2 No.1010.1 EN 61326 Emissions and immunity Class A; En 61010-1 | Opens Openses from an internal removable NiMH rechargeable battery pack (installed) A fully charged battery provides approximately 16 hours of normal use 2 to 3 hours (in the tester) for a fully discharged battery pack 2 to 3 hours (in the tester) for a fully discharged battery pack -20° to 60°C (-4° to 140°F) -40° to 70°C (-40° to 158°F) -55% (operation without condensation) IEC60529 1P02, international protection water dripping Random, 2 g. 5-500 Hz 1 Neter Orop Test (3 ft.) Tracing Tone Frequency Level VF Noise Impedance Filters Metallic Noise Power Influence VF Loss Signal Level | Operates from an internal removable NiMH rechargeable Departates from 20 to 30 kf (0 to 15240m) Departates from 20 to 50 kf (0 to 15240m) Repair Rel Fault Resistance Loop Resistance Departate Resistance Departates from 100 kf) Departates from 100 kf) Departates from 100 kf) Departates from 100 kf) Departates from 20 to 30 kf (0 to 15240m) Departates from 20 to 4 kf) Same as RFL Count Departates from 100 kf) Departates f |

| Specifications: Basic 99 | ODSL (continued) | |
|--------------------------|-----------------------|-------------------|
| Function | Range | Accuracy |
| VF Longitudinal Balance | 0 to 70 dB | ± 2 dB |
| Disturbing Frequency | 200 to 2500 Hz | 0.1% |
| Impedance | 60012 | 1% |
| Filters | C, Psopnometric | |
| Send VF Tone | | |
| Frequency | 100 Hz to 20 kHz | 0.1% |
| Amplitude (Settable) | -20 to 3 a6m | ± 0.5 aB |
| (555556) | (1 dB increments) | ± 0.5 35 |
| Impedance . | 60011, 90011 | 1ºie |
| Specifications: 990DSL | Widehand Fastures | |
| Function | Range | Accuracy |
| WB Noise/Level | | Accuracy |
| Impedance | 10002, 13502, Bridged | 1% |
| Filters | E, F, G, None | 176 |
| Frequency | 10 i.Hz to 1200 kHz | 0.1% ± 508 Hz |
| Amplitude | -50 to 3 dBm | ± 1 a8 @ 13514 |
| | -90 to -50 dBm | ± 3 dB @ 13512 |
| Weighted WB Noise | 75 CD | المردا في ماه د ١ |
| Impedance | 10012, 13512, Bridged | |
| Filters | E, F, G, None | |
| Frequency | 10 to 1200 kHz | |
| Amplitude | 0 to 30 dBm | ± 5 CB |
| • | 30 to 120 dBrn | ± 3 aB |
| WB Loss | | 1,00 |
| Impedance | 135Ω | 1% |
| Frequency | 10 to 1200 kHz | 0.1% ± 508 Hz |
| Magnitude | 0 to 50 dB | ± 1 d8 |
| | 50 to 70 dB | ± 2 dB |
| WB Longitudinal Balance | 0 to 70 dB | ± 2 a6 |
| Disturbing Frequency | 20 kHz to 1104 kHz | 0.1% |
| Impedance | 100 (4, 135)) | 1% 1% |
| Filters | E, F, G, Nane | - |
| Send WB Tone | | - |
| Frequency | 10 to 1200 kHz | 0.1% ± 508 Hz |
| Amplitude (fixed) | 0.0 dBm | ± 0.5 dB |
| Impedance | 160(1, 13511 | 1% |
| • | | 1.70 |

Each set includes:

- · Extensive on-line help
- Internal results storage, both text and graphical
- RS-232 Serial interface for printing, uploading results to a PC, and downloading firmware for the test set
- Rugged weather-resistant handheld design
- High-resolution, backlit LCD display
- Graphical operator prompts and tests results
- Typical 16-hour battery life, with easy-change NiMH battery and user settable power save feature
- · Protective bag with shoulder strap and strand hook
- Rubber shock absorbing holster
- AC power supply
- 12 Volt vehicle charger
- Wire gauge
- · Users guide

| WB Impulse Noise | | - |
|--------------------------|----------------------------------|-------------------------|
| Impedance | 10011, 13511, Bridged | 1% |
| Filters | E, F, G, None | . 2 |
| Test Time | 1 to 1440 Minutes | 1% |
| Impulse Counter | 0 to 9999 | |
| Counter Threshold | -40 to 0 dBm | 1% CD |
| ADSL Auto-Test | | • • |
| . Impedance | 10012 | - C |
| Noise Filters | E, F, G, None | - > |
| ADSL Standard | ANSI Full, G. Lite | |
| Data Rate Prediction | | |
| Resolution | 32 kb/s | |
| Downstream Rate | 0 to 8192 kb/s | ± 96 kb/s |
| | | (3 units of resolution) |
| Upstream Rate | 0 to 1024 kb/s | ± 64 kb/s |
| • | | (2 units of resolution) |
| Specifications: 990DSL 1 | DR Feature | |
| Function | Range | Accuracy |
| Impedance | 135Ω | 1% |
| Pulse-width | 20, 100, 500, 1000, | 10% ± 5 ns |
| | 2500, 5000 ns | |
| Vop Selection | 0.300 to 0.999 | |
| Range (Vop = 0.64) | 30,000 ft. (9144m) | _ |
| Range Selection (Auto.) | 10 ft. to 48 kf (3 to 14630m) | = |
| Horizontal Resolution | 0.5 to 156 ft. (0.1524 to 47.5m) | • |
| Distance to Reflect. | 0 to 30,000 ft. (0 to 9144m) | 1% ± Vop uncertaint; |
| Vertical Gain | 80 dB | 2 dB |
| Power Filter | 5 kHz Highpass | 4 |
| Averaging Filter | 4x Waveform Avg. | - |
| Input Protection | ± 400 V? | • |

For More Information

For more information or to contact your local Fluke Networks Representative, call (800) 825-9810. Or send email to copperpro@flukenetworks.com.

| Ordering Information | | |
|----------------------|--|--|
| Model | Description | |
| 990DSL | Loop Tester | |
| 990DSLWT | Loop Tester with Wideband and TDR | |
| 990TL-N | Test Lead Set (Plain) | |
| 990TL-S | Test Lead Set (Spike) | |
| 990TL-8 | Test Lead Set (Bed of Nails) | |
| 990TL-SB | Test Lead Set (Spike and Bed of Nails) | |
| 990-Printer | 990DSL Serial Graphics Printer (Seiko DPU-414) | |
| 990-CASE | Deluxe Transport Bag | |
| GOLD | Extended Warranty and Service Option | |

NETWORKSUPERVISION

Fluke Networks P.O. Box 777, Everett, WA USA 98206-0777

Fluke Networks operates in more than 50 countries worldwide. To find your local office contact details, go to www.flukenetworks.com/contact.

62003 Fluke Corporation, All rights reserved. Printed in U.S.A. 5/2003 1526640 B-ENG-N Rev C